

Getting Started

- Select the charging adaptor.
- Open the rubber cover on the charging socket at the base, plug in the charger, the red indicator (●) will light during charging.
- Charge for 8-10 hours, the green indicator (●) will light when fully charged.
- Unplug the charger and replace the rubber cover before use.
- Always charge with the light in the OFF position.
- Do not use continually with the charger connected to the mains.



Warnings

- Suitable for use with children under adult supervision. This is not a toy.
- Power adapter & remote are not waterproof, keep away from water.
- In fast flashing or strobe mode the light source may potentially trigger seizures with children that have a history of photosensitive epilepsy.
- Send used alkaline and zinc carbon batteries to battery recyclers or check with your local or state solid waste authority. These small, round batteries have historically contained silver, cadmium, mercury or other heavy metals as their main component.
- Please retain this information for future reference.




WARNING:

CHOKING HAZARD—Small parts.
Not for children under 3 yrs.

CAUTION - Keep batteries away from children.

If swallowed, contact a doctor immediately. For treatment information, call the 24-hour National Battery Ingestion Hotline at 1-800-498-8666. Do not attempt to recharge, install backwards, expose to fire, or combine with other battery types, as the batteries may explode or leak, causing burns and other injuries. Replace all used batteries at the same time. Do not combine with used batteries.

Remote Control Instructions

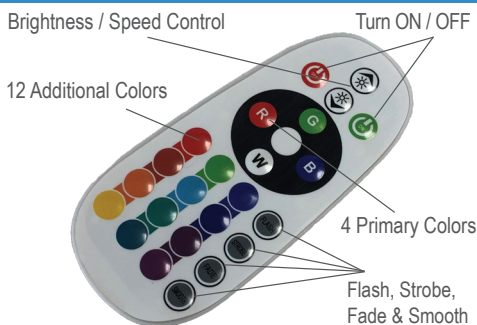

Technical Specifications

- (IP65 rated) Light unit suitable for indoor use.
- Operating time 5-10 hours (depending on program setting).
- Charger Input - AC 100V-240V 50/60HZ - Output DC5V.
- Battery replacement for remote: 2 x AAA.

Troubleshooting

- Light stalls between color change when in Flash/ Strobe/ Fade/ Smooth mode, this means the battery is very low. Turn OFF and then charge fully for 8-10 hours.
- Extend battery life by charging when power is low, rather than allowing light to become completely exhausted. Usage time will reduce when running Flash/Strobe/Fade/ Smooth program.
- Remote not responding but light can be turned ON/OFF manually at the base. Check condition and that batteries are correctly installed.